


SAMSUNG

Operating Instructions

VACUUM CLEANER

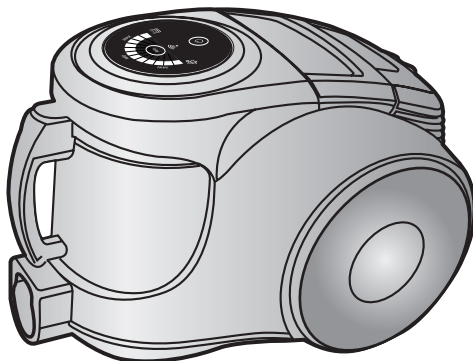


- * Before operating this unit, please read the instructions carefully.
- * Indoor use only.

Register your product at www.samsung.com/global/register


IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING** : Do not use the vacuum cleaner when rug or floor is wet.
Do not use to suck up water.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bin. Empty the dust bin before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and dis-colour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
8. This appliance is not intended for use by young persons or infirm persons without supervision unless they are adequately supervised by a responsible person to ensure that they can use the appliance safely.
Young children should be supervised to ensure that they do not play with the appliance.
9. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
10. The use of an extension cord is not recommended.
11. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. Don't carry the vacuum cleaner by holding the hose.
Use the handle on the vacuum cleaner set.






1 ASSEMBLING THE CLEANER

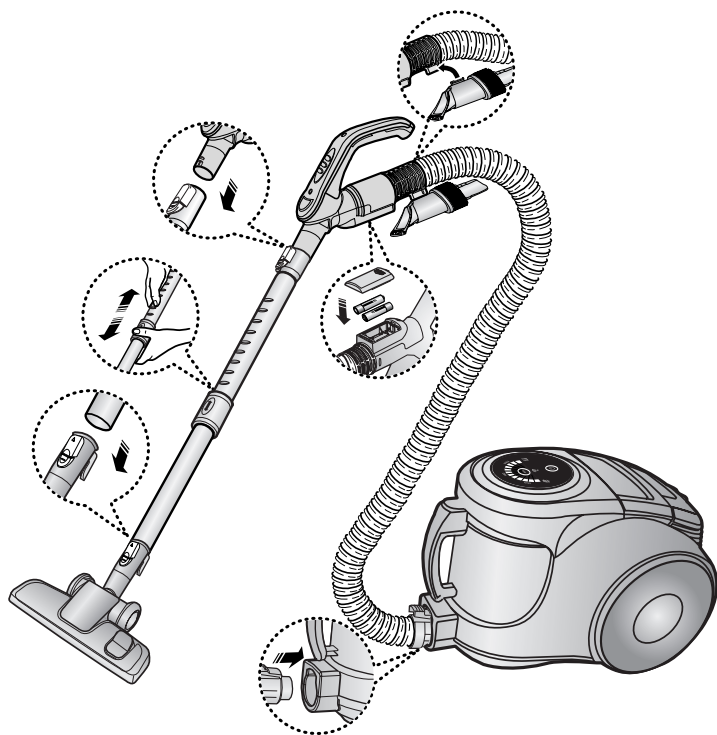


OPTION

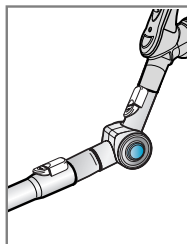


OPTION

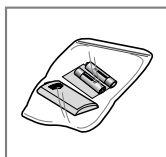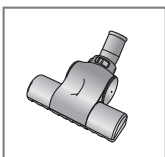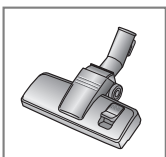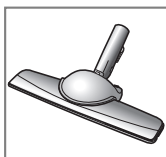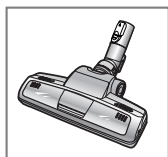

► Features may vary according to model.

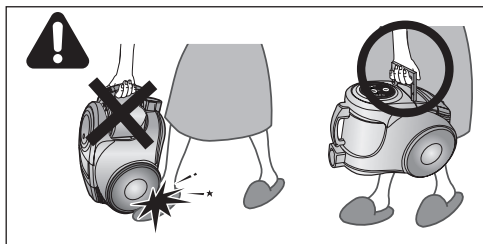


CAUTION : Please do not use dust bin handle when carrying machine.

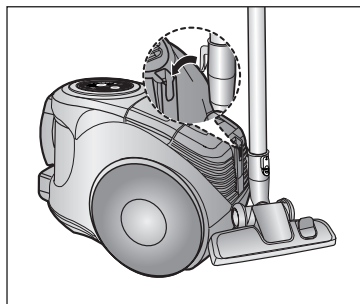



For storage, park the floor nozzle.

2 OPERATING THE CLEANER

2-1 POWER CORD

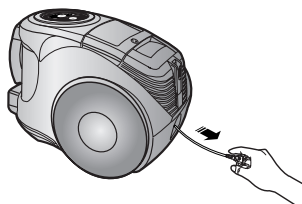

Please make sure your cable is fully extended before use.

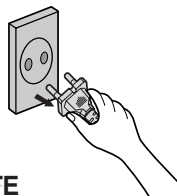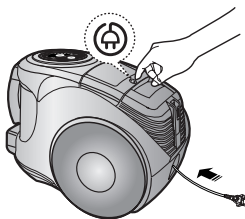


NOTE

When removing the plug from the electrical outlet, grasp the plug, not the cord.

2-2 POWER CONTROL (INFRARED CONTROL)

- HOSE

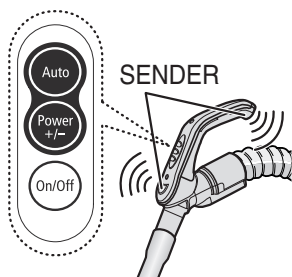

HANDLE CONTROL


[The cleaner is controlled by using infrared signals.]

1. Vacuum cleaner ON/OFF
Press the ON/OFF button to operate the vacuum cleaner.
Press again to stop the vacuum cleaner.
2. Vacuum cleaner MODE (+/-)
Press the MODE button repeatedly to select the correct mode.
(ON) MIN → MID → MAX



3. Using Auto mode
Press the Auto button to operate the vacuum cleaner automatically.

- BODY

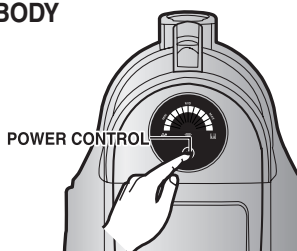

Press the power control button repeatedly to select the correct mode.
(ON(MAX) → OFF)

NOTE : If the remote handle control is not working, the cleaner can be operated using the control button on the body of the machine.



The filter light is illuminated when the dust pack requires checking or emptying. An audio signal will also sound.



This shows the generation of negative ions when the vacuum cleaner is in operation.






The IR light indicates the part that receives the infra-red signal from the handle control.







This indicates that the automatic suction mode is selected.
The level of suction is indicated by the LED display.



2-3 HOW TO USE AND MAINTAIN THE ACCESSORIES



► Features may vary according to model.



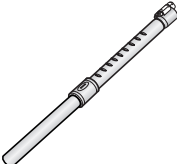
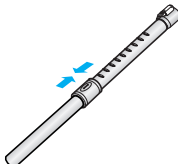
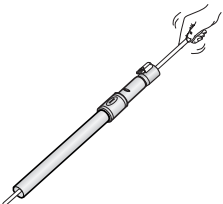
PIPE		
		
	Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.	
		
		To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.




ACCESSORY		
		Push the accessory on to the end of the hose handle.
		Pull out and turn the dusting brush for cleaning delicate areas.
		To use the upholstery tool, push the accessory on to the end of the hose handle in the opposite direction.

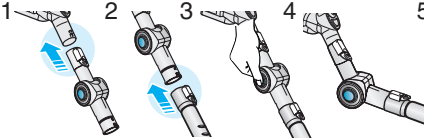ELBOW EXTENDING TUBE (OPTION)	
	 1. Connect the elbow extending tube to connecting part for hose knob and telescopic pipe. 2. Fit the telescopic pipe to the lower part of the elbow extending tube. 3. Press the PUSH button. 4. With the PUSH button pressed, the elbow extending tube is folded. 5. Using the elbow extending tube allows hard to reach areas (e.g. under furniture) to be cleaned without having to kneel down.

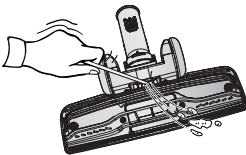OPTION		
	► Carpet Cleaning	
	► Floor Cleaning	
	Adjust the inlet lever according to the floor surface.	
		Remove waste matter completely if the inlet is blocked.

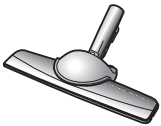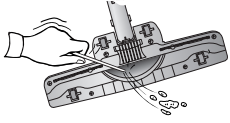
OPTION		
	Vacuum dust in wide area at once	 Remove waste matter completely if the inlet is blocked.

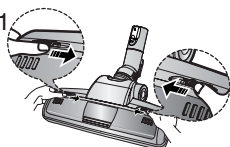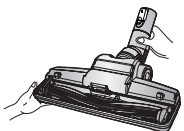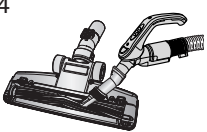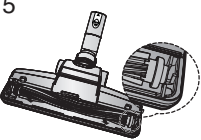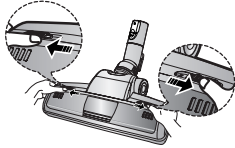OPTION	Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.	
 For improved pick-up of pet hair and fibre on carpets	1  Push the Open button of the transparent screen cover to separate the cover. 2  Remove the brushbar from the transparent screen. 3  Remove waste matter such as dust and hair tangled around the brushbar using scissors. 4  Remove dust inside the brush housing using a dry duster or crevice tool. 5  Insert brushbar into rotating belt and assemble. 6  Click the transparent screen cover back into place to reassemble.	

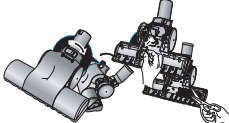OPTION	Clogs on turbine keeps brush from turning, and in this case, take care of it.		
 Brush for blanket For picking up pet hair and fibre on upholstery and bed linen.	 Remove waste matter completely when inlet is blocked.	 Turn the lock button to 'UNLOCK', and remove waste matter.	 To reassemble, align the cover to the front of the main body and close. After closing the cover, ensure that the lock button is turned to the 'LOCK' position. Warning : Use for bedclothes only. Be cautious not to damage brush during unclogging.


3 EMPTYING THE DUST BIN

1

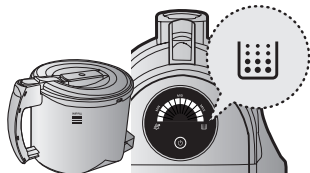


Once dust reaches the dust full mark, or once the filter check light is on, empty the dust bin.

2

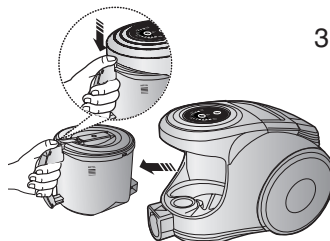


Take the dust bin out by pressing the button.

3

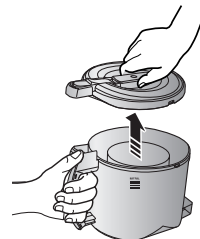


Separate the dust bin cover.

4

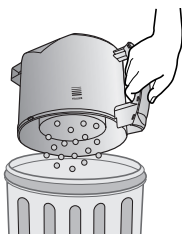


Throw away dust in the bin.

5

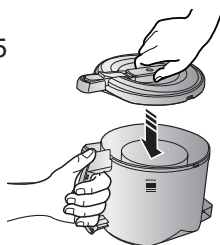




Close the dust bin cover.

6

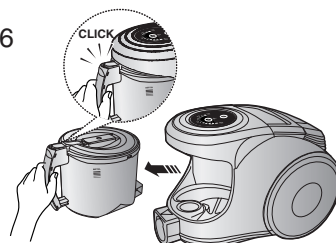

Before use, push the dust bin into the main body of the vacuum cleaner until you hear the "click" sound.

- Empty into a plastic bag (recommended for asthma/allergy sufferers)

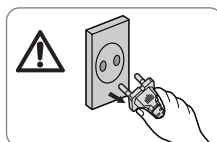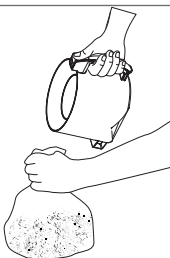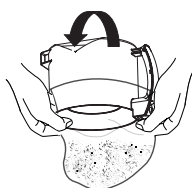

NOTE


You may rinse the dust bin with cold water



4 *CLEANING THE DUST PACK*


4-1. WHEN TO CLEAN THE DUST PACK

- If suction is noticeably reduced during cleaning, please check the dust pack as indicated below.

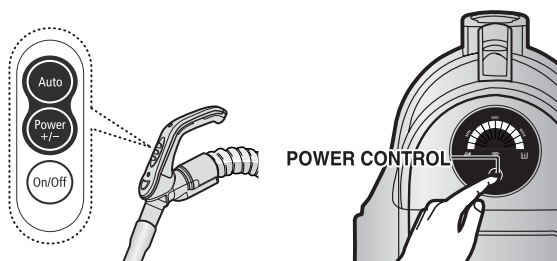


Turn the vacuum power to 'MAX'

HANDLE CONTROL

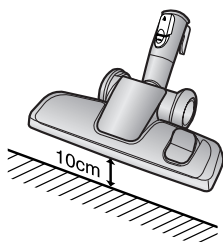


If the filter check indicator turns red with the inlet floating 10 cm above flat floor, clean it.

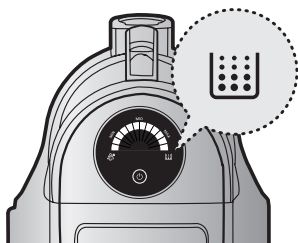


When the indicator light comes on, please empty the Dust Pack(4-2) as shown in the following illustrations.


4-2 CLEANING THE DUST PACK

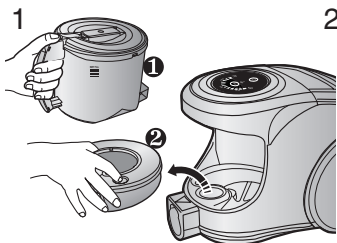


Remove the dust bin and dust pack as shown.

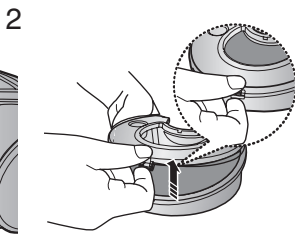


Remove the fixed frame of the dust pack cover.

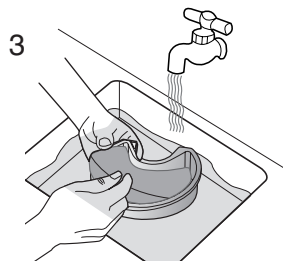


Remove the sponge pad from the dust pack.

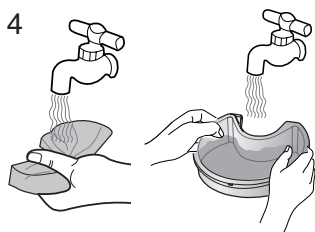


Wash the sponge and the filter of the dust pack with water.

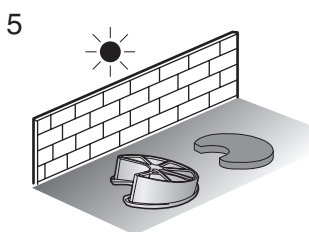


Let the sponge and dust pack dry in the shade for more than 12 hours.

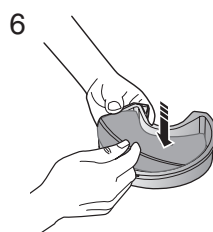

Put the sponge into the dust pack.

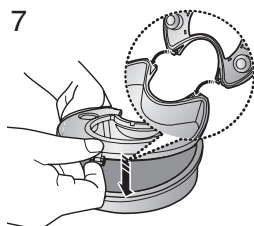

Before reassembly, align the dust pack cover and dust pack correctly.

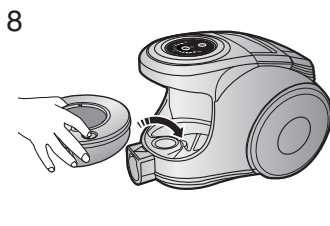


Put the assembled dust pack into the main body.




NOTE : Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.

5 *CLEANING THE MOTOR PROTECTION FILTER*

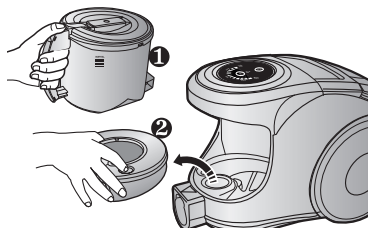


Take out both the dust bin and the dust pack.

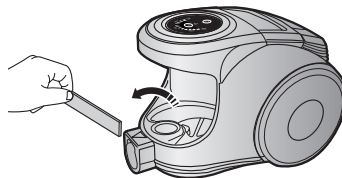


Remove the motor protection filter from the vacuum cleaner. Shake and tap the dust from it and put back in machine.


6 *CLEANING THE OUTLET FILTER*

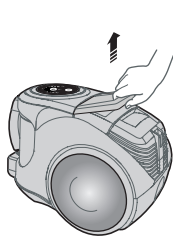

Lift the handle.

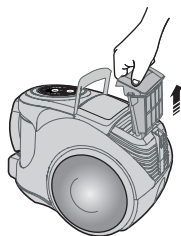


Hold the handle of the outlet filter and lift to remove.

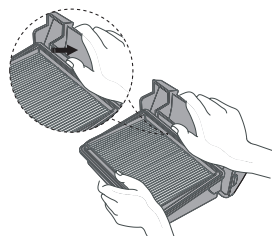


Remove the fixed frame of the outlet filter cover.



Dust off the outlet filter by gently tapping.

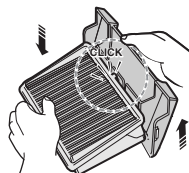


Before reassembly, align the outlet filter cover and the outlet filter correctly, and push the outlet filter until you hear a click sound.

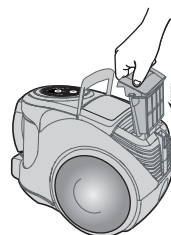

Push the outlet filter into the main body until you hear a click sound.

7 CHANGE THE BATTERY(OPTIONAL)

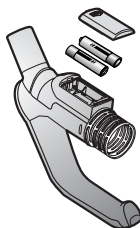

BATTERY TYPE : AA Size



NOTE

1. When the vacuum cleaner does not work, replace the batteries.
If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AA.



WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+),(-) poles.
4. Dispose of the batteries properly.

- IF YOU HAVE A PROBLEM

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply. Thermal cut-out.	Check cable, plug and socket. Leave to cool.
Suction force is gradually decreasing.	Nozzle, suction hose or tube is blocked.	Check for blockage and remove it.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push the cord rewind button.
Vacuum cleaner does not pick up dirt.	Crack or hole in hose.	Check hose and replace if required.
Low or decreasing suction	Filter is full of dust.	Please check filter and, if necessary, clean as illustrated in the instructions.






V تغيير البطارية (اختياري)



نوع البطارية: حجم AA

ملاحظة

١. إن كانت المكنسة الكهربائية لا تعمل، استبدل البطاريات.
٢. إن استمرت المشكلة، اتصل بموزعنا المعتمد.
٢. أستخدم بطاريتين من حجم AA.

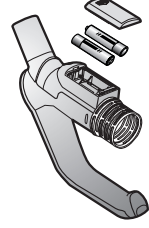


١. لا تفك البطاريات أبدًا أو تعيد شحنها.
٢. احرص على عدم تسخين البطاريات أو إلحاقها بالنار.
٣. لا تعكس القطبين (+)، (-).
٤. تخلص من البطاريات بشكل صحيح.


- إن كانت لديك مشكلة

المشكلة	السبب	الحل
المحرك لا يعمل .	لا يوجد تيار كهرباء . انقطاع بسبب ارتفاع الحرارة .	افحص الكابل والفيشة والمقبس . اتركه يبرد .
قوة الشفط تقل تدريجياً .	الفوهة أو خرطوم أو أنبوب الشفط مسدود .	تأكد من وجود أي انسدادات وتخلص منها .
السلك لا يلف بالكامل .	تأكد من أن السلك غير ملتو أو ملتف بشكل غير متساو .	اسحب السلك إلى الخارج من ٢ إلى ٣ م ثم اضغط زر لف السلك .
المكنسة الكهربائية لا تلتقط الأوساخ .	يوجد شرخ أو فتحة بالخرطوم .	افحص الخرطوم واستبدله إذا لزم الأمر .
قوة الشفط منخفضة أو تتناقص .	الفلتر ممتلئ بالغبار .	افحص الفلتر ونظفه إذا لزم الأمر باتباع التعليمات الموضحة .

0 تنظيف فلتر حماية المحرك

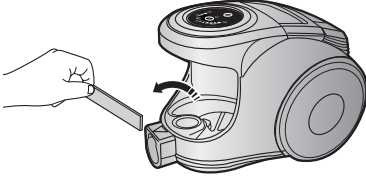


انزع فلتر حماية المحرك من المكينة الكهربائية.
انفض الغبار منه وضعه مرة أخرى بالجهاز.

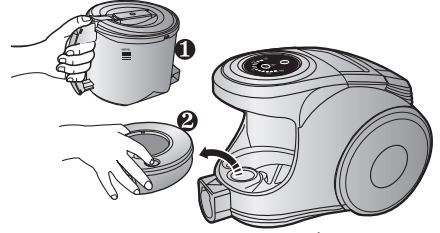


أخرج كلاً من صندوق الغبار وكيس الغبار.


7 تنظيف فلتر التفريغ

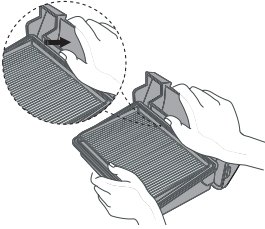


انزع الإطار الثابت من غطاء فلتر
التفريغ.

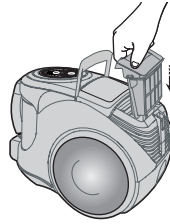


امسك مقبض فلتر التفريغ وارفعه
لتنزعه.

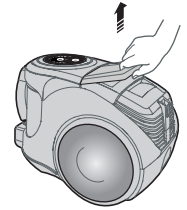

ارفع المقبض.

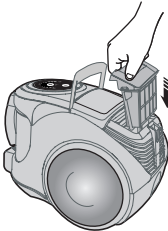

ادفع فلتر التفريغ داخل جسم
المكينة إلى أن تسمع صوت طقطقة.

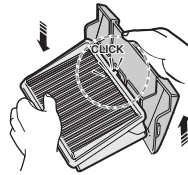


قبل إعادة تركيبه، ضع غطاء فلتر
التفريغ بمحاذاة فلتر التفريغ، ثم
ادفع فلتر التفريغ إلى أن تسمع
صوت طقطقة.




انفض الغبار عن فلتر
التفريغ بواسطة نقره
برفق.


٢-٤ تنظيف كيس الغبار

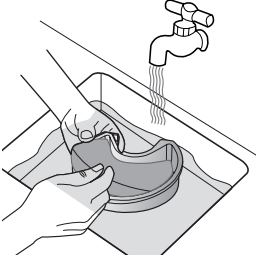


انزع الوسادة الإسفنجية من كيس الغبار.

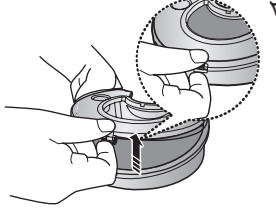


انزع الإطار الثابت لغطاء كيس الغبار.

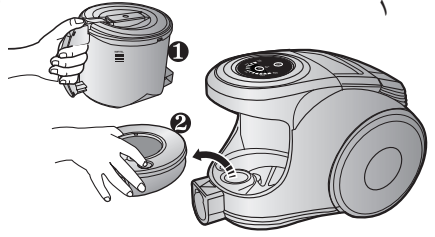


انزع صندوق الغبار وكيس الغبار كما هو موضح.

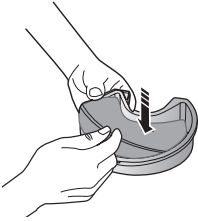


ضع الإسفنجية داخل كيس الغبار.

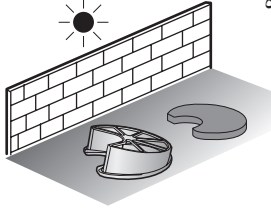


اترك الإسفنجية وكيس الغبار ليجف في مكان ظليل لأكثر من ١٢ ساعة.

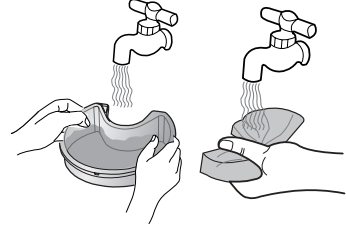

اغسل الإسفنجية وفلتر كيس الغبار بالماء.

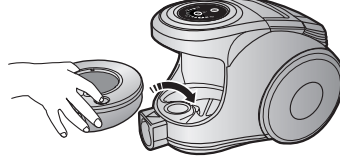

ضع كيس الغبار الذي تم تركيبه داخل جسم المكنسة.

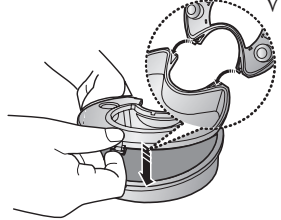


قبل إعادة التركيب، ضع غطاء كيس الغبار بمحاذاة كيس الغبار.

ملاحظة : تأكد من جفاف الفلتر تمامًا قبل وضعه داخل المكنسة الكهربائية. اتركه ليجف لمدة ١٢ ساعة.


تنظيف كيس الغبار

٤-١ متى ينبغي تنظيف كيس الغبار


- إن قلت قوة الشفط بشكل ملحوظ أثناء التنظيف، افحص كيس الغبار كما هو موضح.

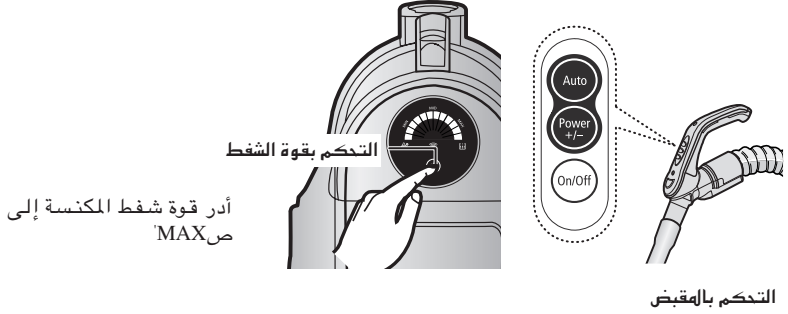


إن أضاء مؤشر فحص الفلتر باللون الأحمر وكان مستوى الشفط ١٠ سم فوق الأرضية، يجب تنظيفه.

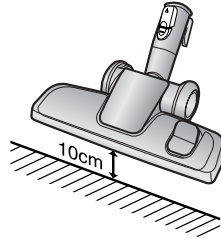

عندما يضيء المؤشر، يرجى تفريغ كيس الغبار (٢-٤) بالطريقة الموضحة في الأشكال التالية.

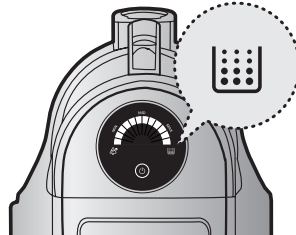


تفريغ صندوق الغبار

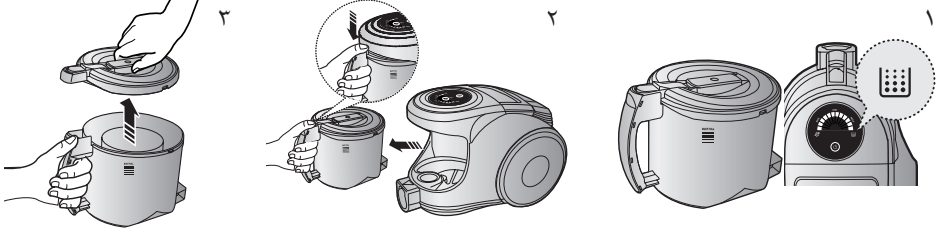

افصل غطاء صندوق الغبار.

انزع صندوق الغبار بالضغط على الزر.


فور أن يصل الغبار إلى علامة الامتلاء، أو فور إضاءة مصباح الامتلاء، يجب تفريغ صندوق الغبار.

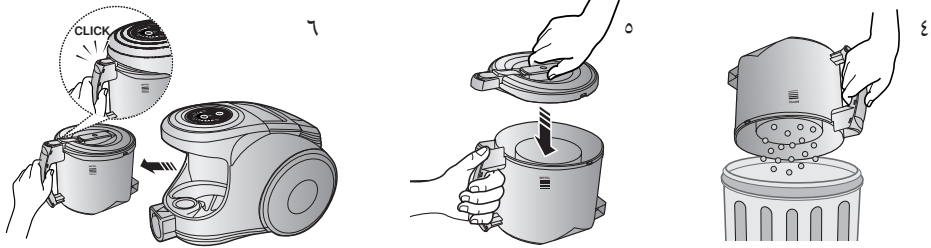


قبل الاستعمال، ادفع صندوق الغبار داخل جسم المكنسة الكهربائية إلى أن تسمع صوت طقطقة.

أغلق غطاء صندوق الغبار.

تخلص من الغبار الموجود بالصندوق.


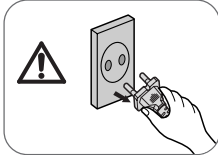



- فرغ الغبار في كيس بلاستيك.
(ينصح بهذا لصالح مرضى الربو والحساسية)



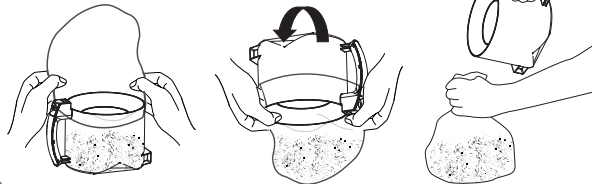


ملاحظة


يمكنك شطف صندوق الغبار بالماء البارد.




 تخلص من أي فضلات تماماً إن كانت فتحة الشفط مسدودة.	اكس الأتربة في المناطق الواسعة مرة واحدة.	اختياري 
---	--	--


إن الكنس المستمر لشعر أو فرو الحيوانات قد يؤثر على الدوران بسبب تشابك تلك المواد حول القطعة الدوارة. في هذه الحالة نظف القطعة الدوارة بعناية. ١  اضغط على زر OPEN بغطاء الحاجز الشفاف لفصل الغطاء. ٢  انزع قضيب الفرشاة من الحاجز الشفاف. ٣  تخلص من أي فضلات مثل الأتربة أو الشعر المتشابك حول قضيب الفرشاة بواسطة مقص. ٤  تخلص من الأتربة داخل تجويف الفرشاة باستعمال أداة تفحص الغبار أو أداة التخلص من التراب بالشقوق. ٥  أدخل قضيب الفرشاة داخل الحزام الدوار وقم بتركيبه. ٦  ضع غطاء الحاجز الشفاف مكانه لتركيبه.		اختياري  لتحسين التقاط شعر الحيوانات والخيوط من السجاد.
---	--	--




إن وجود أي انسدادات في التربين تمنع الفرشاة من الدوران، وفي هذه الحالة يجب التعامل معها. ١  لإعادة التركيب، ضع الغطاء بمحاذاة الجهة الأمامية من الجسم الرئيسي وأغلقه. بعد إغلاق الغطاء، تأكد من تحويل زر إلى 'LOCK'. ٢  أدر مفتاح القفل إلى 'UNLOCK'، وتخلص من الفضلات. ٣  تخلص من أي فضلات تماماً إن كانت فتحة الشفط مسدودة.		اختياري  الفرشاة للبطانيات لالتقاط شعر الحيوانات والخيوط من الأثاث وأغطية السرير.
تحذير: للاستعمال مع أغطية السرير فقط. كن حذراً كي لا تتلف الفرشاة من التخلص من الانسداد.		

٣-٢ كيفية استعمال الكماليات والاحتفاظ بها ◀ قد تختلف الخصائص باختلاف الموديل.

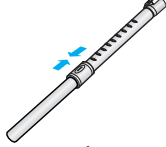
 للتحقق من وجود انسداد، افصل الأنبوب المتداخل وقم بتقصيره. هذا يسمح بسهولة التخلص من الفضلات التي تسد الأنبوب.	 قم بتعديل طول الأنبوب المتداخل عن طريق تحريك زر التحكم بالطول الموجود في منتصف الأنبوب المتداخل نحو الأمام والخلف.	الأنبوب 
--	---	--

قم بتثبيت قطعة الكماليات في نهاية مقبض الخرطوم.		قطعة كماليات
اسحب فرشاة الغبار ثم أدرها لتنظيف الأماكن الرقيقة.		
لاستعمال أداة الأثاث، ثبت قطعة الكماليات في نهاية مقبض الخرطوم في الاتجاه المعاكس.		

١. صل أنبوب التمديد المنحني بقطعة التوصيل بين مقبض الخرطوم والأنبوب المتداخل. ٢. ثبت الأنبوب المتداخل بالجزء السفلي من أنبوب التمديد المنحني. ٣. اضغط زر PUSH. ٤. أثناء الضغط على زر PUSH، يطوى أنبوب التمديد المنحني. ٥. إن استعمال أنبوب التمديد المنحني يسمح بالوصول إلى الأماكن التي يصعب الوصول إليها (مثل تحت قطع الأثاث) لتنظيفها بدون الحاجة إلى الانحناء.	أنبوب التمديد المنحني (اختياري) 
---	---

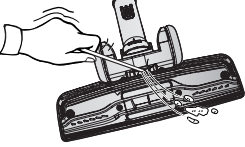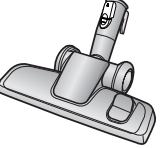 تخلص من أي فضلات تماماً إن كانت فتحة الشفط مسدودة.	اختياري ◀ تنظيف السجاد  ◀ تنظيف الأرضية  قم بتعديل مستوى الشفط تبعاً لنوع سطح الأرضية.	
---	---	--

٢-١ سلك الكهرباء

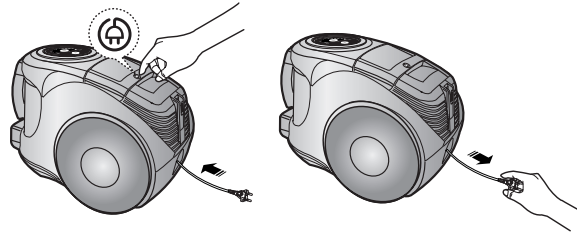

تأكد من تمديد الكابل بالكامل قبل الاستعمال.




٢-٢ التحكم في القوة (التحكم بالأشعة تحت الحمراء) - الخطو م

١. تشغيل/إيقاف المكينة الكهربائية.
اضغط زر ON/OFF لتشغيل المكينة الكهربائية.
اضغط ثانية لإيقاف تشغيل المكينة.
٢. زر وضع المكينة الكهربائية MODE(+/-)
اضغط زر MODE مرارًا لاختيار الوضع الصحيح.
(ON) MIN → MID → MAX



٣. استخدام الوضع الآلي.
اضغط زر Auto لتشغيل المكينة الكهربائية آليًا.

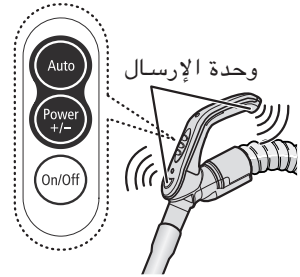

التحكم بالمقبض


[يتم التحكم بالمكينة بواسطة الإشارات تحت الحمراء]

- الجسم

١. اضغط زر التحكم بقوة الشفط مرارًا لاختيار الوضع الصحيح.
(ON(MAX) → OFF)

ملاحظة: إن كان التحكم عن بعد بواسطة المقبض لا يعمل، يمكن تشغيل المكينة بواسطة زر التحكم الموجود بجسم المكينة.

التحكم بقوة الشفط

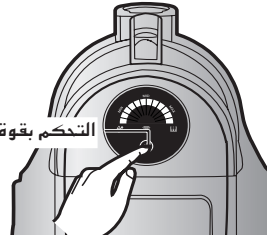

هذا يشير إلى توليد أيونات سالبة عند تشغيل المكينة الكهربائية.



يضيء مصباح الفلتر حينما يحتاج كيس الغبار إلى الفحص أو التفريغ. وستصدر أيضًا إشارة صوتية.




هذا يشير إلى اختيار وضع الشفط الآلي. يشار إلى مستوى الشفط بواسطة مصباح البيان LED.




يشير ضوء الإشارات تحت الحمراء IR إلى الجزء الذي يستقبل الإشارة تحت الحمراء من التحكم بالمقبض.




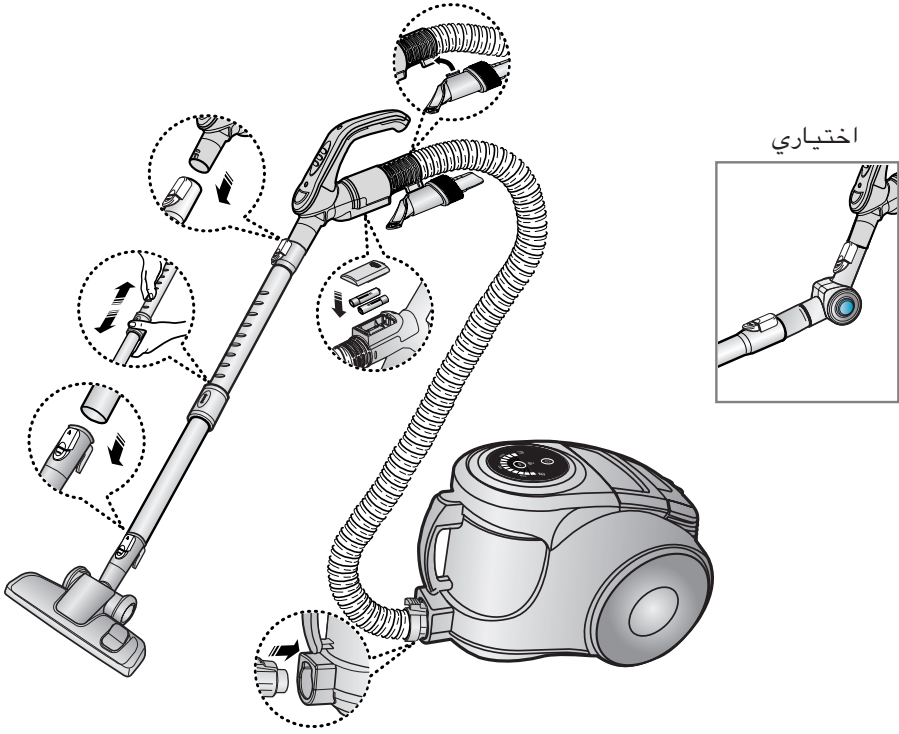


اختياري

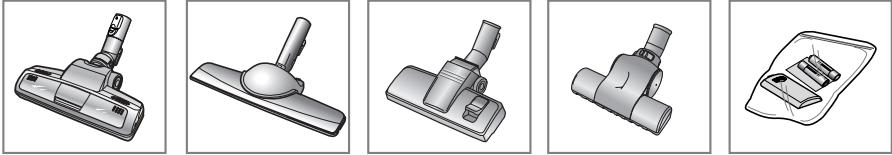

قد تختلف الخصائص باختلاف الموديل.

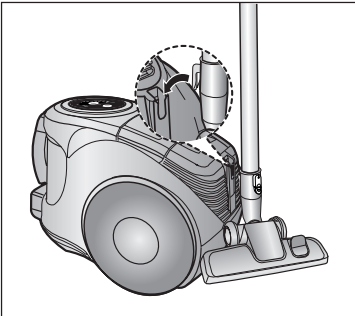

اركن فوهة البلاط لتخزين المكنسة الكهربائية.

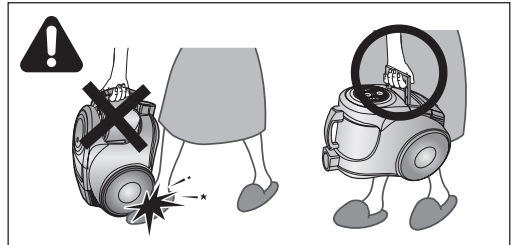


تنبيه: لا تستعمل مقبض صندوق الغبار عند حمل الجهاز.

احتياطات هامة

١. اقرأ كل التعليمات بعناية. قبل تشغيل الجهاز، تأكد من أن فولت الكهرباء لديك يماثل الفولت المشار إليه على اللوحة الموجودة أسفل المكنسة.
٢. تحذير: لا تستعمل المكنسة الكهربائية إن كانت الأرض مبللة.
لا تستخدمها لشطف الماء.
٣. يجب توخي الحذر عند استعمال الجهاز في وجود أطفال. لا تترك لهم الفرصة لاستعمال الجهاز كلعبة. ولا تسمح بتشغيل الجهاز بدون حضور أحد البالغين. استعمل المكنسة الكهربائية فقط في الأغراض المحددة لها الموضحة بالتعليمات.
٤. لا تستعمل المكنسة الكهربائية بدون صندوق الغبار. يجب تفريغ صندوق الغبار قبل امتلائه للاحتفاظ بأعلى مستوى كفاءة.
٥. لا تستعمل المكنسة الكهربائية في التقاط أعواد الثقاب، أو الرماد المشتعل، أو أعقاب السجائر. احتفظ بالمكنسة الكهربائية بعيداً عن الموقد أو أي مصادر للحرارة. فقد تؤدي الحرارة إلى تغيير شكل أو لون الأجزاء البلاستيكية بالوحدة.
٦. تجنب التقاط الأشياء الصلبة والحادة فقد تتلف أجزاء المكنسة. لا تقف فوق الخرطوم. ولا تضع أي أشياء ثقيلة فوق الخرطوم. احرص على عدم انسداد الجزء الخاص بالشفط أو الطرد.
٧. أوقف تشغيل المكنسة الكهربائية من جسم المكنسة قبل فصلها عن مصدر التيار. افصل الفيشة من مصدر التيار قبل تغيير كيس الغبار أو حاوية الغبار. لتجنب أي تلف، انزع الفيشة بعد مسكها وليس عن طريق سحب السلك.
٨. هذا الجهاز غير مخصص للاستعمال من قبل الصغار أو غير الأسوياء بدون إشراف، إلا تحت إشراف شخص مسؤول ليتأكد من سلامة استعمال الجهاز. يجب مراقبة الأطفال الصغار للتأكد من عدم عبثهم بالجهاز.
٩. يجب نزع الفيشة من المقبس قبل تنظيف الجهاز أو صيانته.
١٠. لا بنصح باستعمال أجزاء تمديد سلك الكهرباء.
١١. إن كانت المكنسة الكهربائية لا تعمل بشكل صحيح، أوقف التشغيل واستشر وكيل الخدمة المعتمد.
١٢. إن تلف سلك الكهرباء، يجب استبداله عن طريق المصنع أو وكيل الخدمة أو بواسطة الفني المختص لتجنب وقوع أي مخاطر.
١٣. لا تحمل المكنسة الكهربائية عم طريق حمل الخرطوم. استعمل المقبض الموجود على جسم المكنسة الكهربائية.

المكنسة الكهربائية

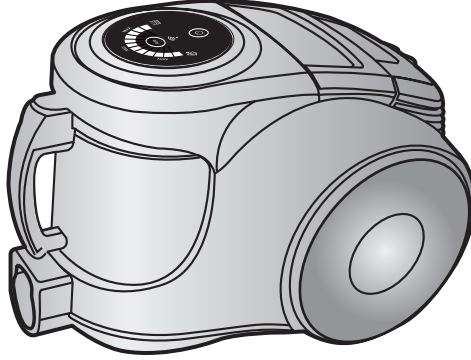

* اقرأ تعليمات التشغيل بعناية قبل تشغيل هذه الوحدة.
* للاستخدام الداخلي فقط.

لتسجيل المنتج قم بزيارة www.samsung.com/global/register